

Changing the Lids On Your Vacuum Beverage Servers

1. Open the lid and locate the screw in front of the stopper.



2. Using a #1 Phillips-Head screwdriver, unscrew and remove the original stopper.



3. Place the new Stopper into the collar & screw into place. Dispose of the old lid.



Note: The new Stopper should fit directly over the opening. If not, refit the new Stopper into the collar and re-tighten.

Spring USA
800-535-8974
www.springusa.com